

PRINTED ECHOPANEL[®], MURA & MUSE

CARE & CLEANING GUIDE



CLEANING

Warning: Do not saturate printed EchoPanel[®], Mura and Muse with water or other cleaning liquids.

Regular cleaning

- Protect from direct sunlight.
- Vacuum regularly using low suction and smooth attachment.
- Professional cleaning recommended.
- Do not use dishwashing or laundry detergents, only use upholstery detergent.
- Do not wet filling.
- Allow to dry away from direct heat thoroughly before re-use.

Spot cleaning

- Treat spills and stains as soon as possible.
- Avoid concentrated rubbing and use minimal pressure only.
- Gently scrape soil or mop liquid from the surface, do not scrub.
- Apply proprietary cleaning agents strictly according to instructions to remove the residue of the spill.
- Ensure adequate ventilation if the product is likely to be subject to excessive moisture.
- Dry cleaning solvent can be used for spot cleaning.