

TILES

INSTALLATION GUIDE

This guide is presented in good faith to assist in the installation of Tiles. It is not intended as an all-encompassing guide, and a professional qualified installer is recommended for optimum results.

Woven Image accepts no responsibility for installation actions taken or not taken. Please refer to Woven Image Pty Ltd. Terms of Trade.


This installation guide contains only recommendations; if you have any questions about installation techniques please contact your distributor or Woven Image sales representative.

Please note:


- Allow for thickness variations due to manufacturing tolerances and any minimal unevenness of substrate.
- Exact colour matching cannot be guaranteed between batches.
- Fibre mix and surface texture may vary.
- Please check that all tiles are the correct design, colour, shape and batch number (if requested).
- No claims will be accepted after panels are installed.
- Ensure appropriate work safety regulations are met, e.g. protective clothing, eyewear and respiratory equipment.

HANDLING & STORAGE


Carry boxes and panels **upright**




Store boxes and panels **flat**

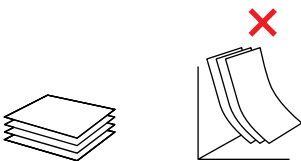


Wear **gloves** for handling **light colours**

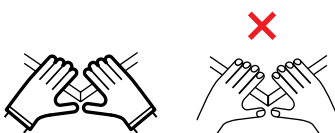


Keep **dry** and **avoid humidity**

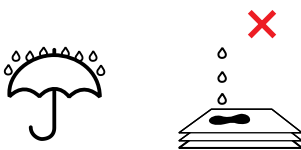


Store in a **cool dry** place, with **no direct sun**.
Avoid 65°C or greater

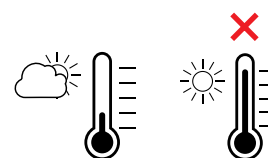


Keep all **surfaces clean** for storage and fabrication

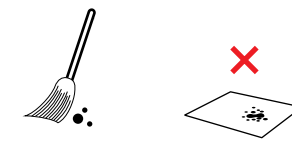

Upon delivery, **inspect** all goods for order **correctness** and **damage**

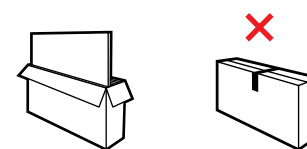

Protect the **edges**

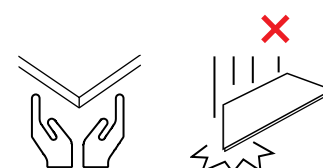

TILES

INSTALLATION GUIDE




INSTALLATION

This guide is for a direct fix method with butt joining side by side.


Cutting/trimming by machine

- Tiles can be cut on a CNC machine or using a plunge cut circular saw or bandsaw with wave toothing blade and a metal guide.
- Do not use a serrated blade with side-set teeth.
- Trial cut on a scrap piece first, as saws will behave differently on sheets of different thickness and density.
- Feed against the rotation of the blade or tool using a slow, consistent feed rate to prevent overheating.
- A fast feed can cause frictional heat which can melt or fuse the heated contact points with a saw blade.

Cutting/trimming by hand



- Ensure blade is inserted into panel at 90° to the surface to ensure square edges and best results for butt joins.
- Ensure the blade is sharp and not too long or flexible to avoid skew cuts.
- Replace the blade often to maintain sharpness.

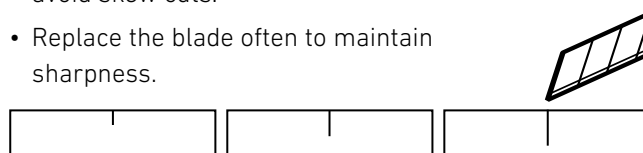

- For best results, use multiple cuts and light pressure.
- Keep flat and use a backing mat.
- Use a secure straight edge for straight cuts.

Fixing & adhesives

- Ensure the wall or ceiling surface is clean and free of dust or imperfections that could prevent adhesion. Industry standard of drywall Level 3 is recommended.
- Tiles can be direct fixed with a commercial adhesive.
- It is the installer's responsibility to ensure the adhesive used is appropriate for the product and substrate it is being fixed to.
- Adhesives should be used as per the manufacturer's instructions.

- Perform a test piece prior to proceeding.
- Prepare the site with a clean drop sheet and place the tiles face side down on the floor.
- When using adhesives, position the panel to the substrate and apply even gentle pressure. Ensure to use minimum pressure at the edges to avoid adhesives showing.